FORM MS–2719–3C–6/2001
REPLACES FORM MS–2719–2Q–10/2000
FILE IN SECT. 2 OF SERVICE MANUAL

Illustrated Parts List

Model Series

287700

TYPE NUMBERS
0026 through 1279.

For Use On Engines Built Before Date Code – 01053100

TABLE OF CONTENTS

Alternator 9
Air Cleaner 5
Blower Housing/Shrouds 7
Cams 2
Carburetor 4
Controls 6
Crankcase Cover/Sump 2
Crankshaft 2
Cylinder 2
Electric Starter 10
Flywheel 8
Fuel Tank 6
Governor Spring 6
Head 3
Ignition 9
Kits/Gaskets–Carburetor 4
Kits/Gaskets–Valve 2
Muffler 5
Oil 3
Piston Group 2
Rewind 8
Valves 3

BRIGGS & STRATTON ®

PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

287700

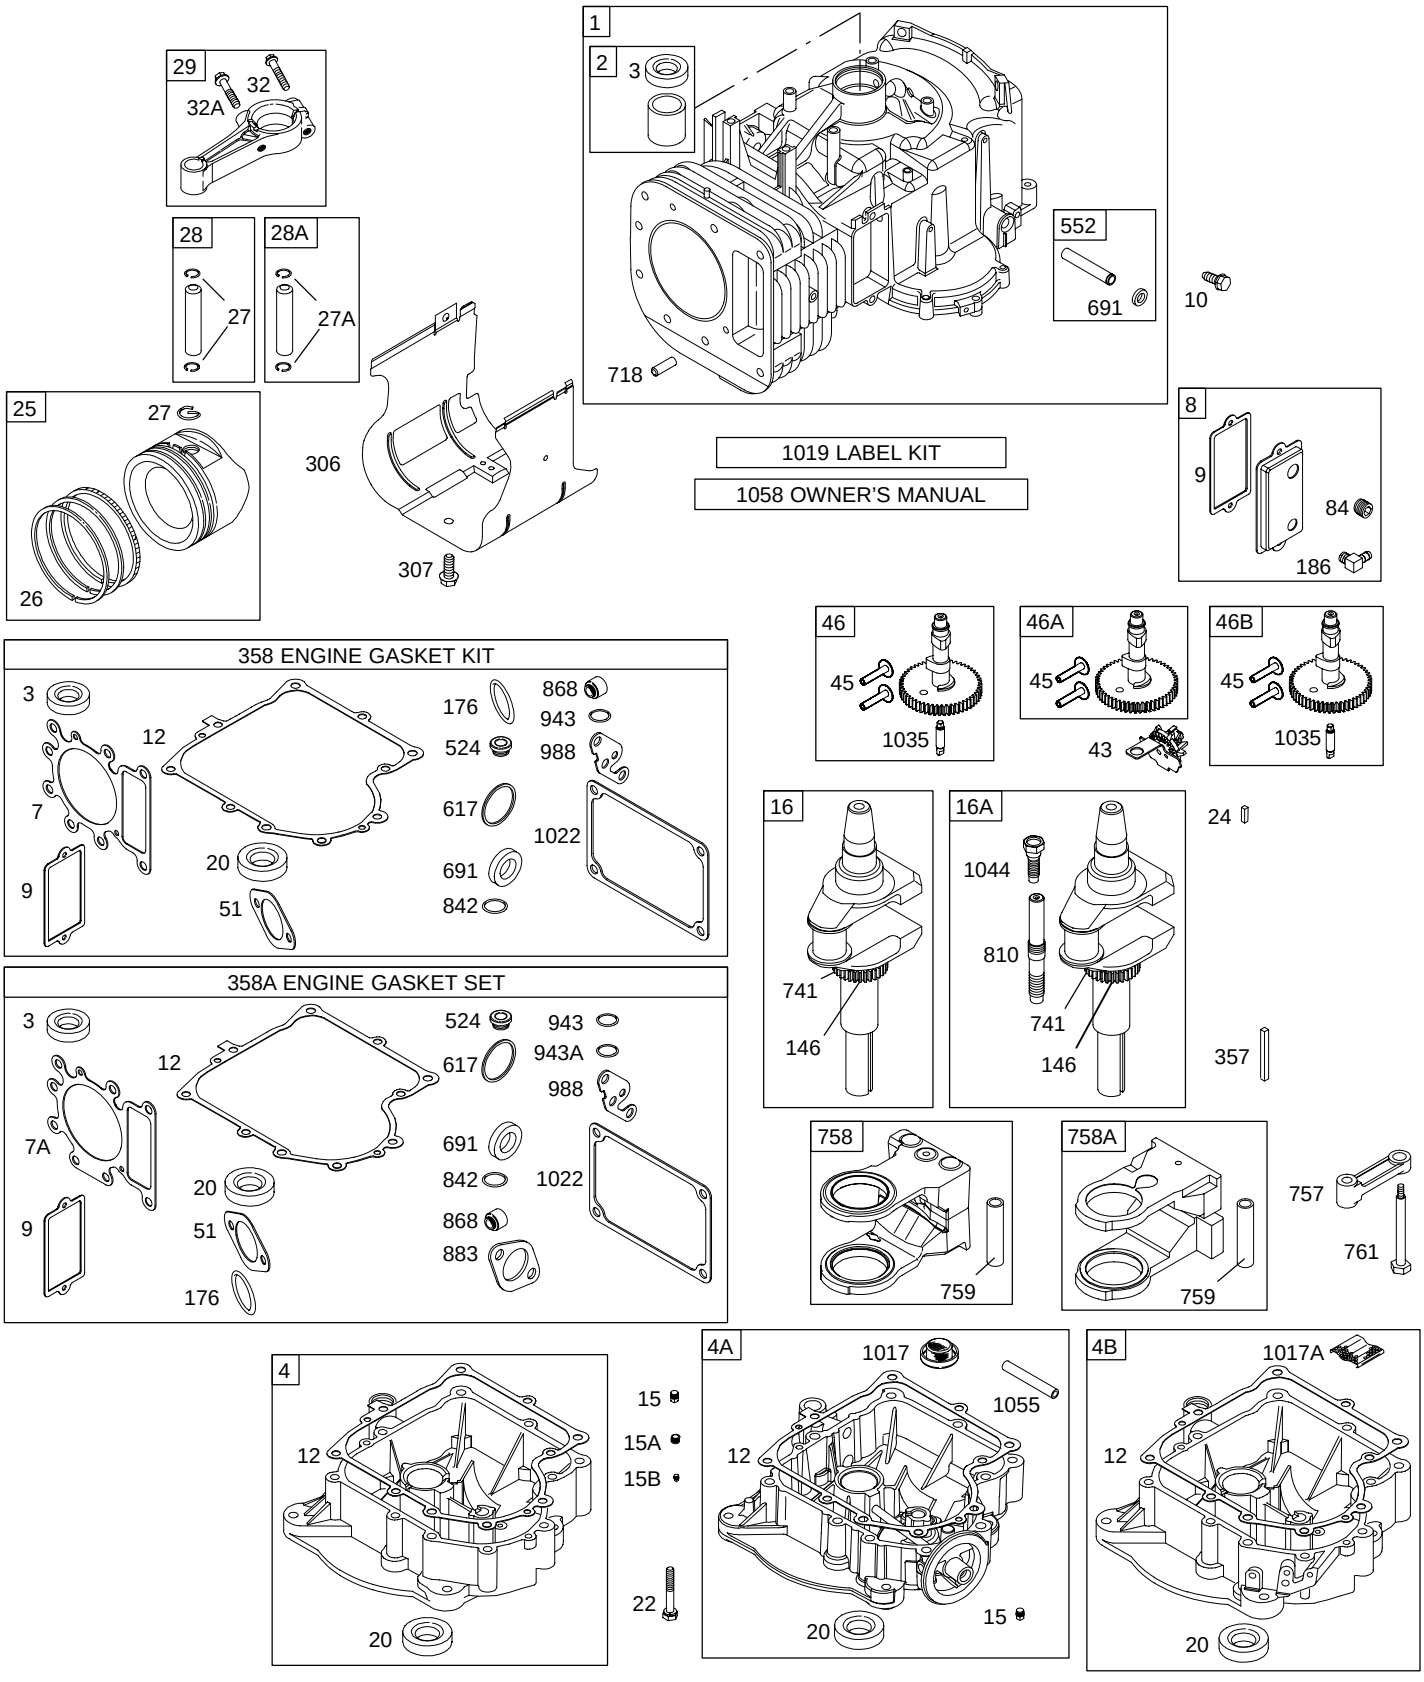

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

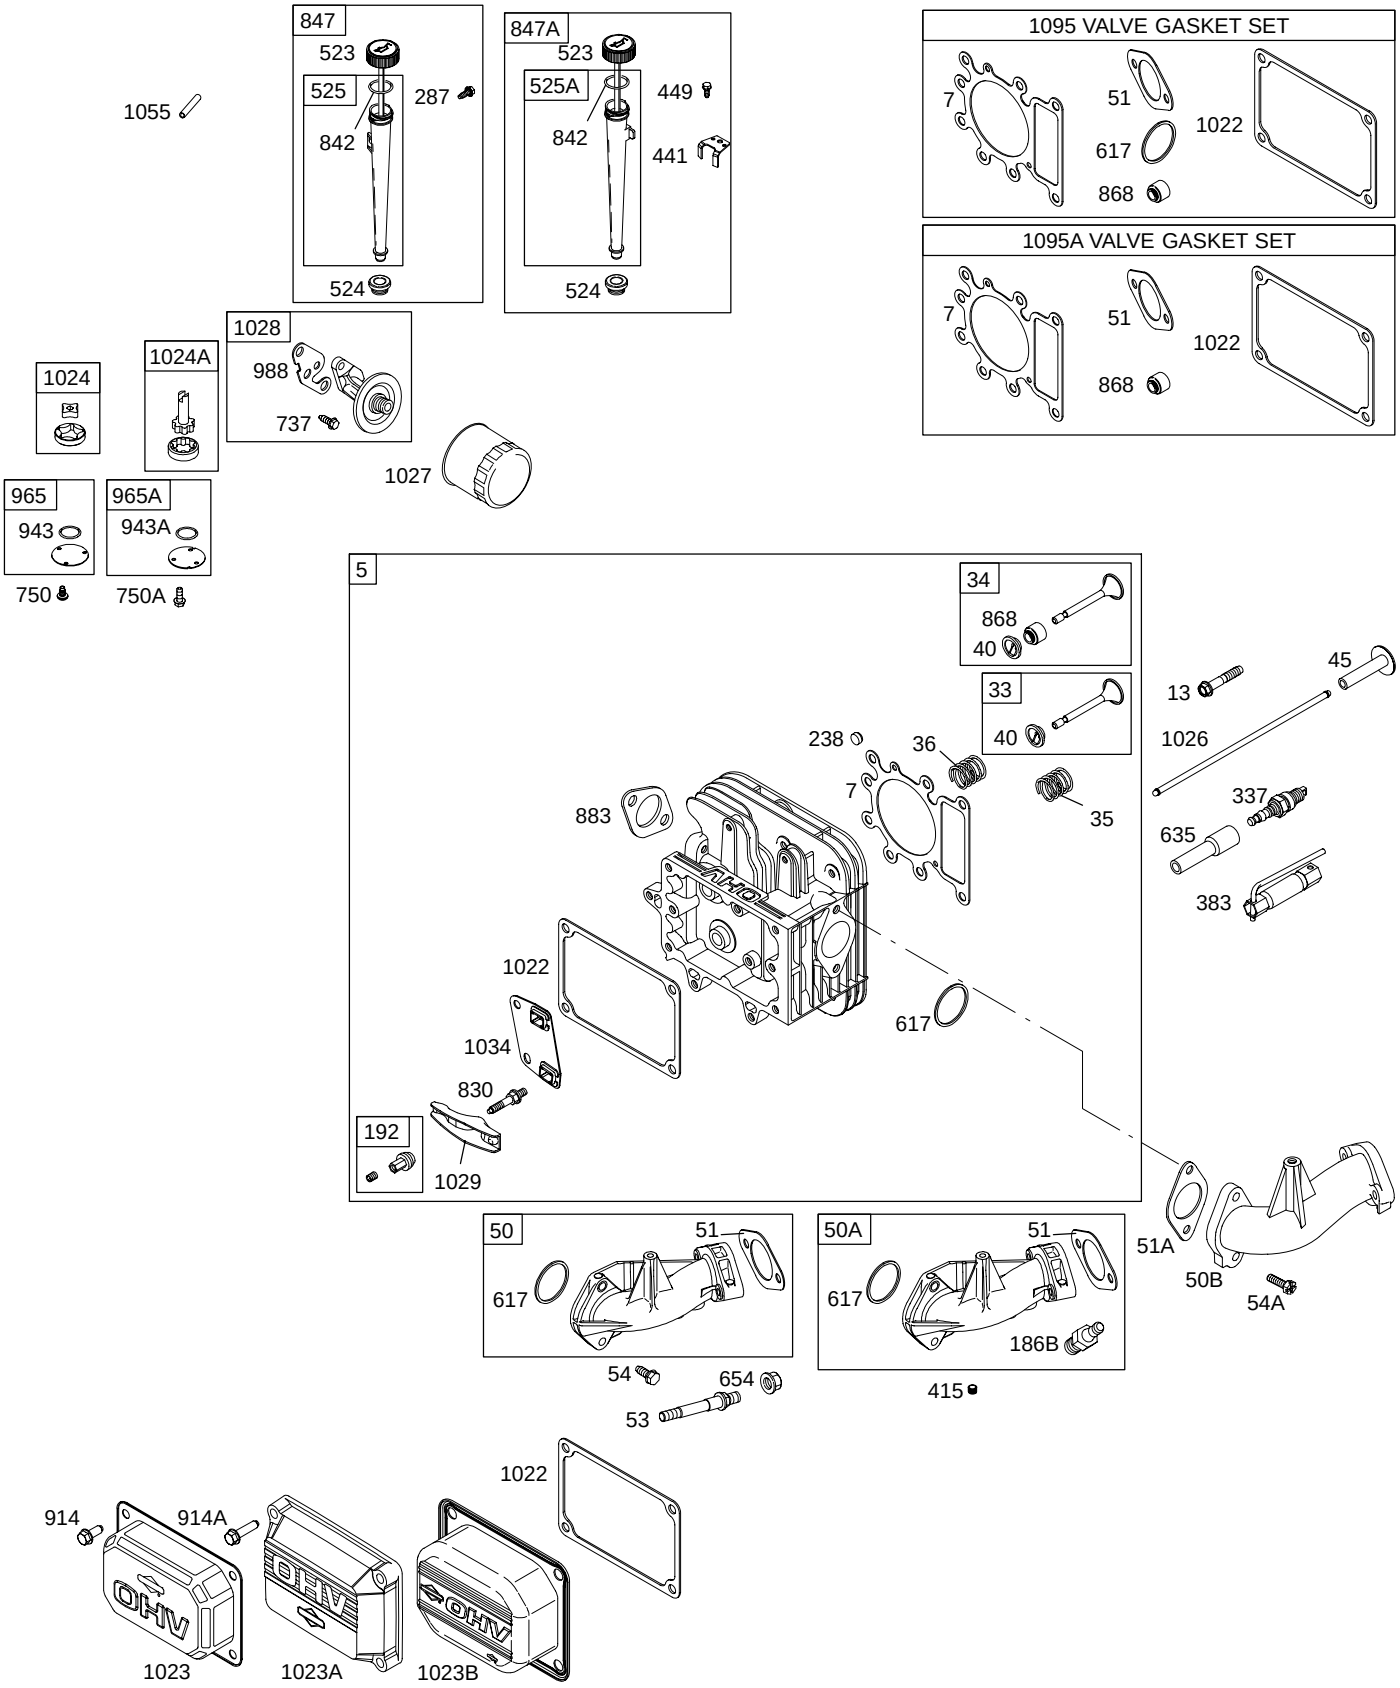

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

287700

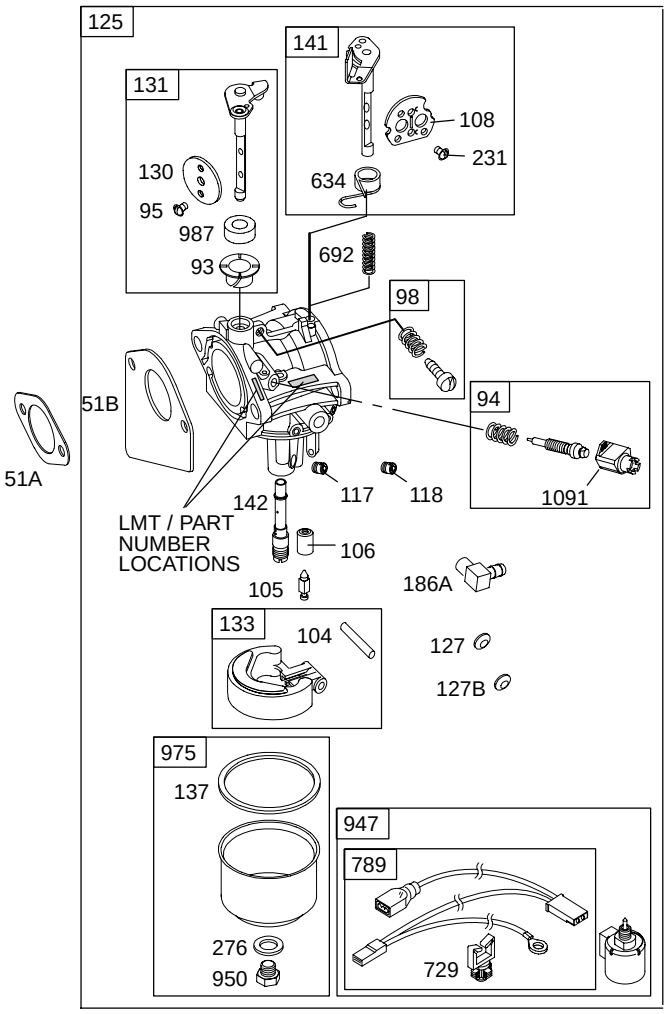

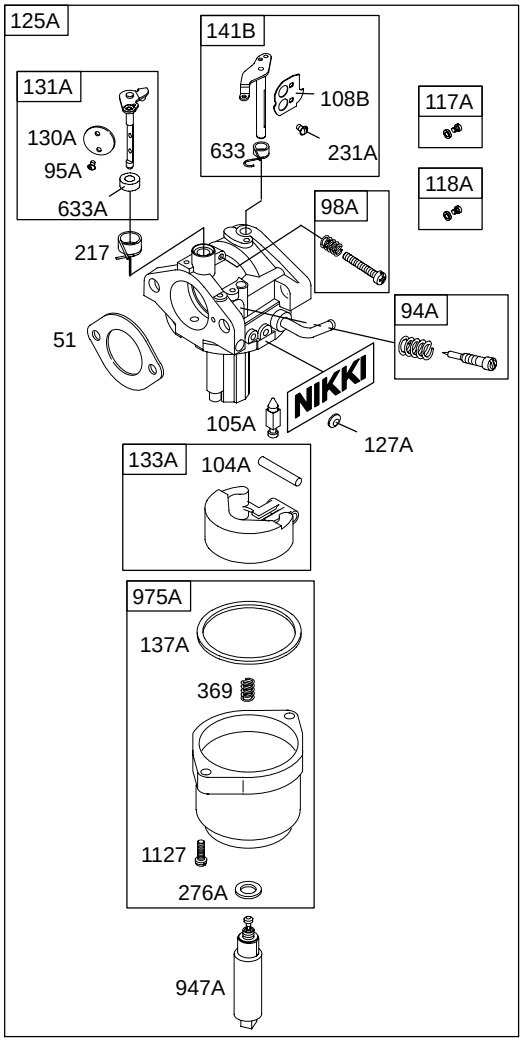

WALBRO

NIKKI

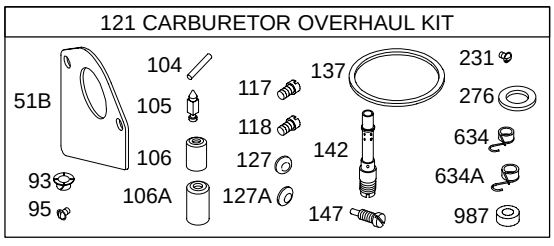

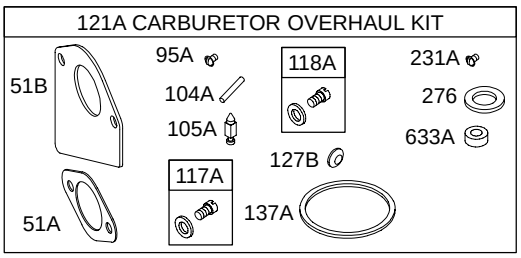

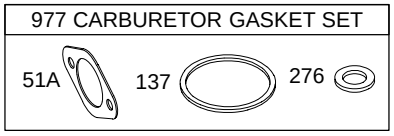

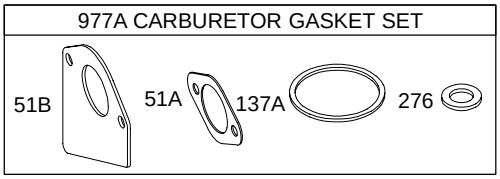

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

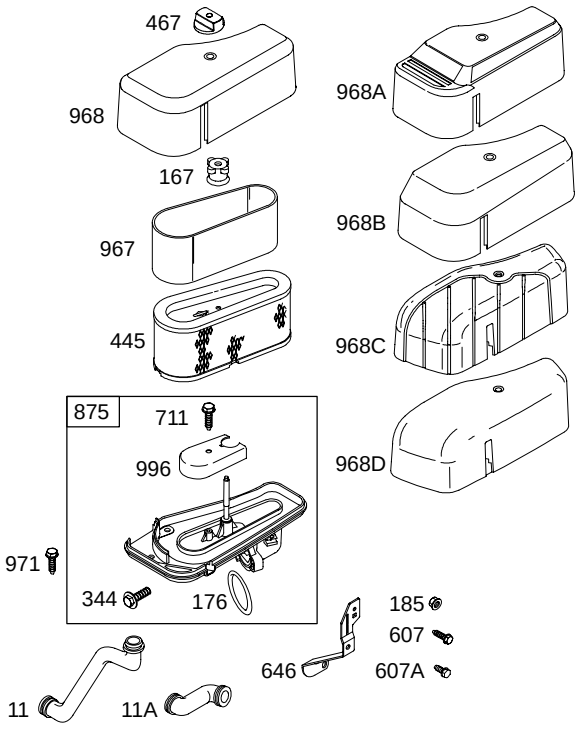

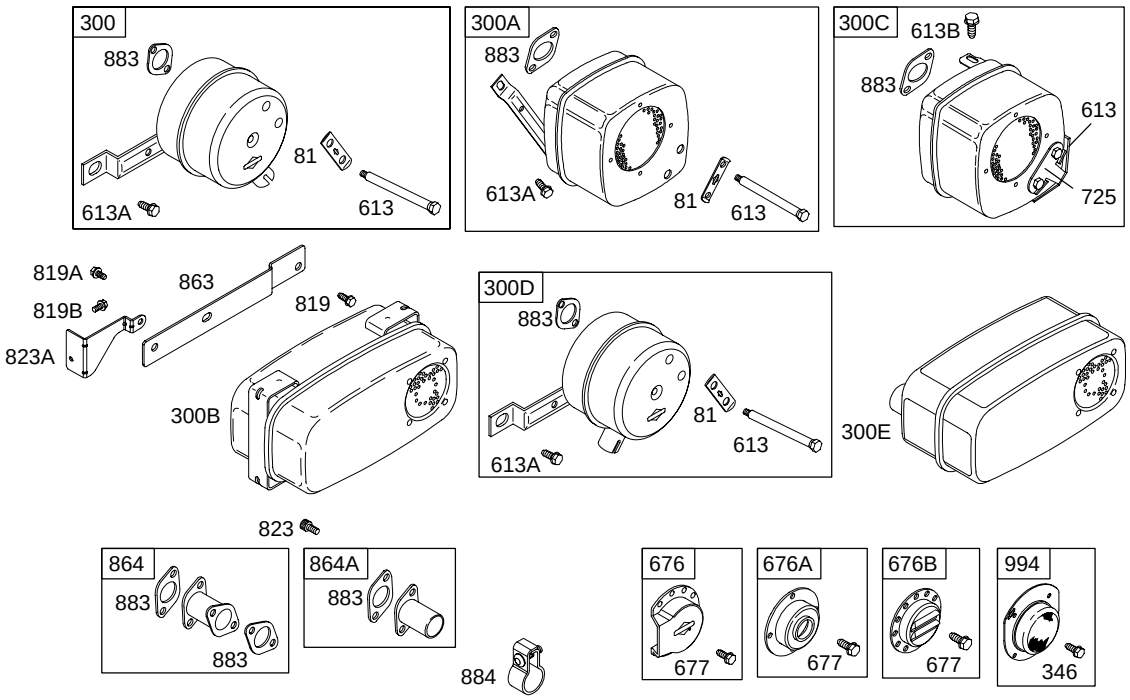

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

287700

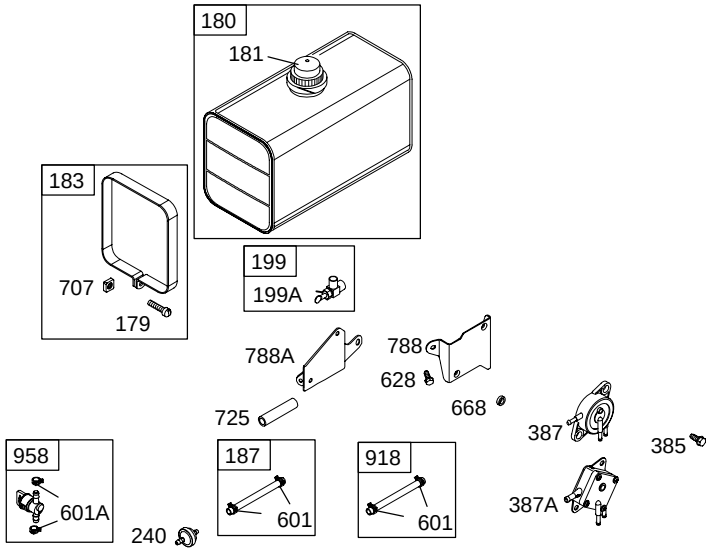

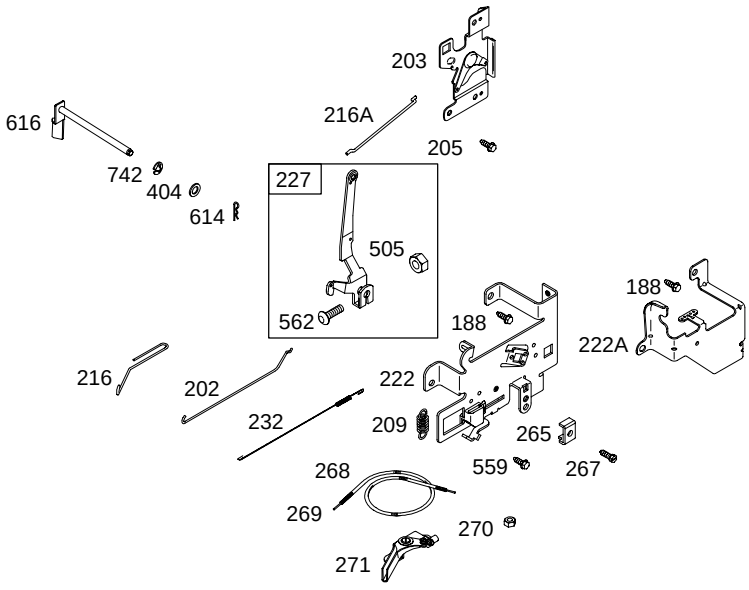

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

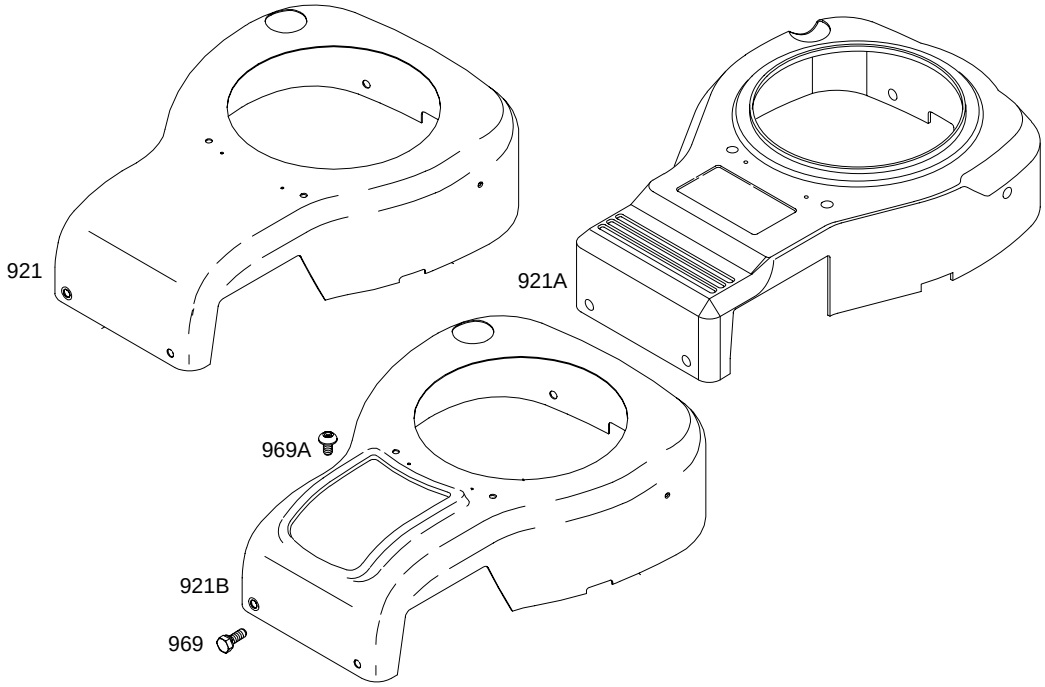

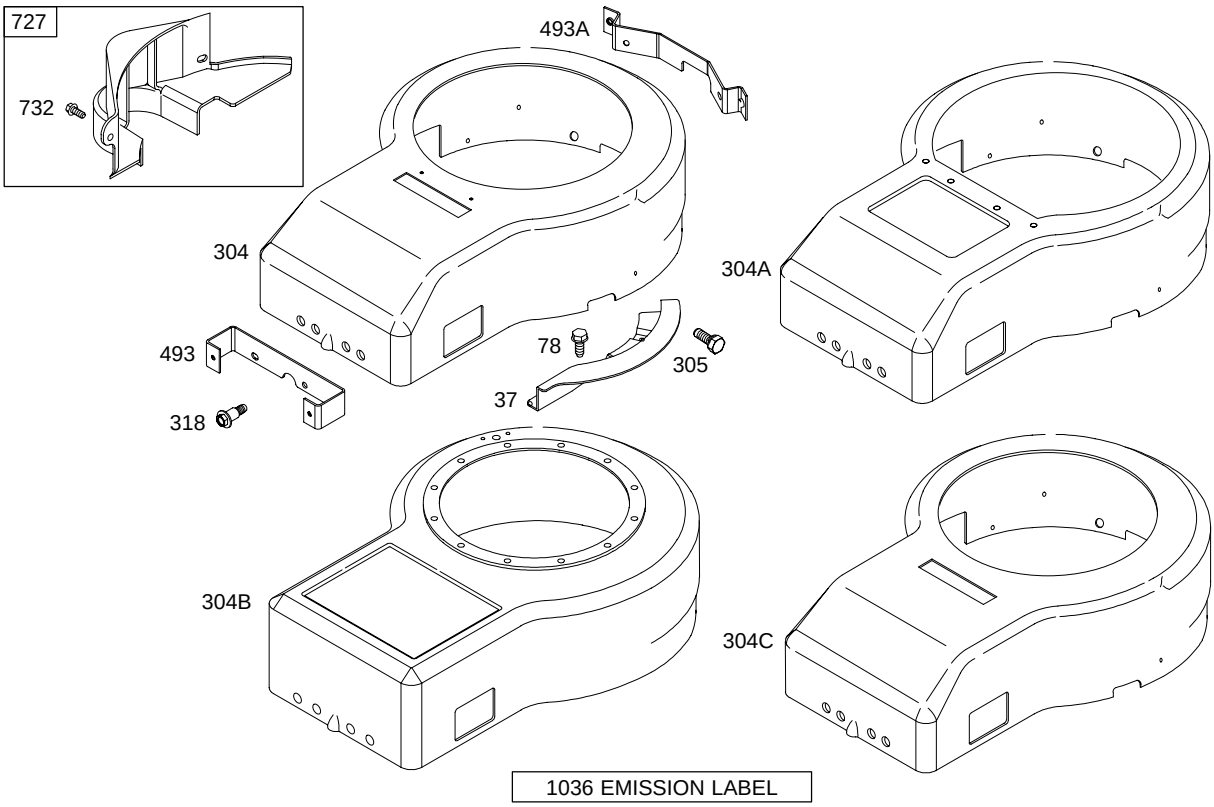

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

287700

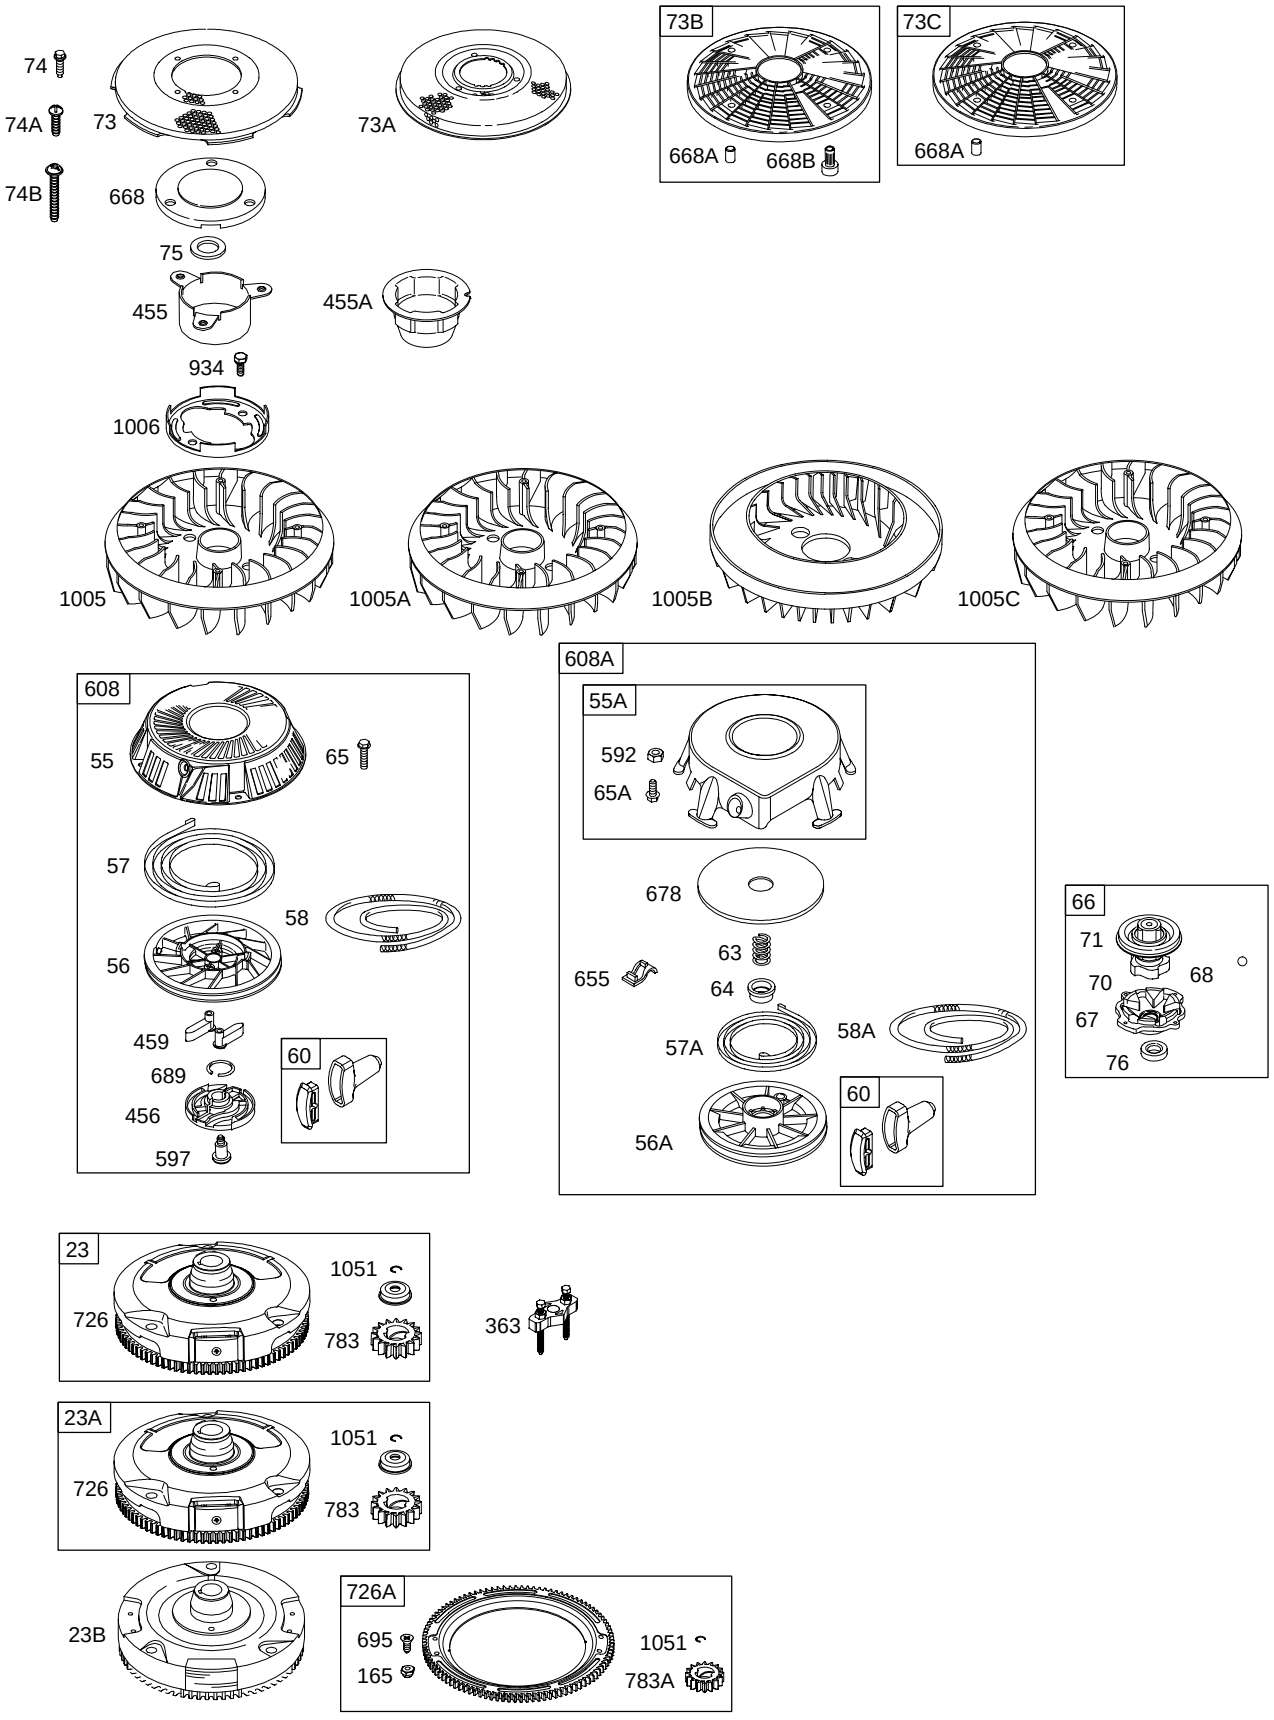

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

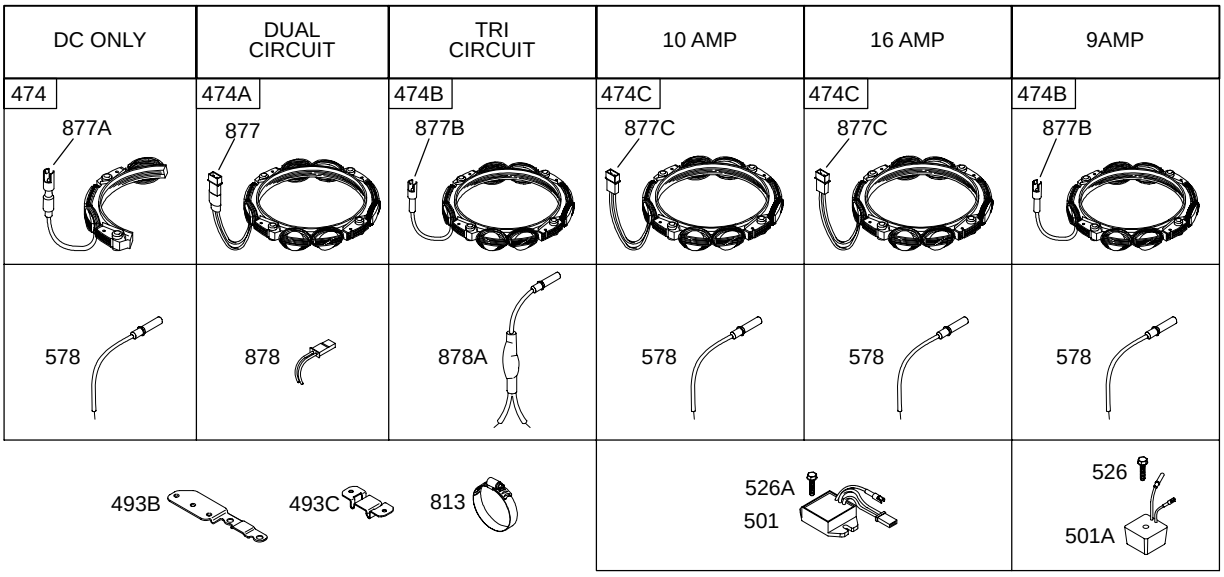

NOTE: *All Stators Use No. 1119 Mounting Screw.*

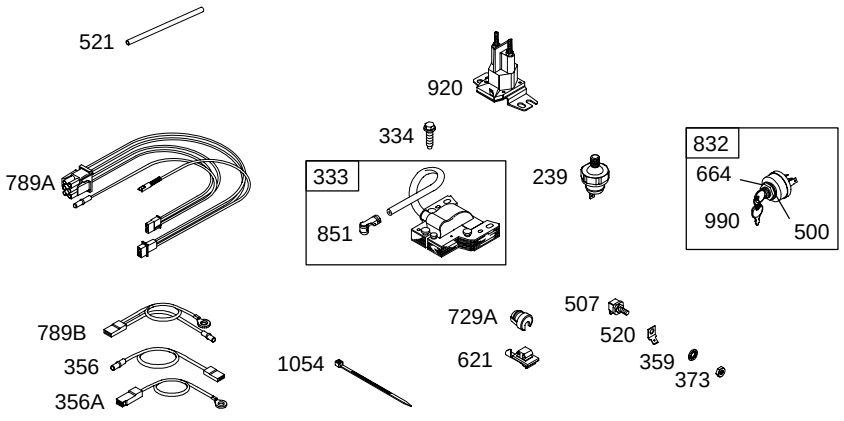

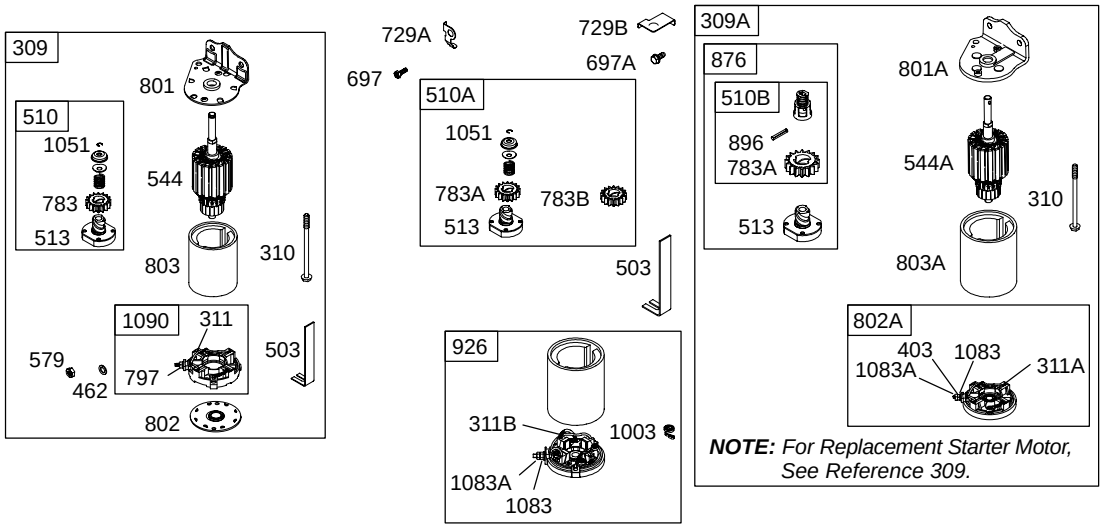
309
801
510
1051
544
783
513
803
310
1090
311
503
579
797
462
802
729A
729B
697
697A
510A
1051
783A
783B
513
503
926
311B
1003
1083A
1083
309A
876
510B
896
783A
513
801A
544A
310
803A
802A
403
1083
1083A
311A
NOTE: For Replacement Starter Motor, See Reference 309.

REF. NO.	PART NO.	DESCRIPTION
1	496412	Cylinder Assembly (Used After Code Date 93072900).
		–––––– Note –––––
		495867 Cylinder Assembly (Used Before Code Date 93073000).
2	399265	Kit–Bushing/Seal (Magneto Side)
3	⋆391086	Seal–Oil (Magneto Side)
4	494238	Sump–Engine
		–––––– Note –––––
		496742 Sump–Engine (Used Before Code Date 98070100). Used on Type No(s). 0256, 0656, 1256.
4A	693582	Sump–Engine (Used After Code Date 98063000). Used on Type No(s). 1256, 1276, 1278.
5	691165	Head–Cylinder
7	Δ⋆273280	Gasket–Cylinder Head
8	696126	Breather Assembly
9	⋆27803	Gasket–Breather
10	691666	Screw (Breather Assembly)
11	691328	Tube–Breather
12	⋆691226	Gasket–Crankcase (.015” Thick, Standard)
		–––––– Note –––––
		⋆691406 Gasket–Crankcase (.005” Thick)
		⋆691405 Gasket–Crankcase (.009” Thick)
13	690360	Screw (Cylinder Head)
15	690946	Plug–Oil Drain
		–––––– Note –––––
		690283 Plug–Oil Drain (Used After Code Date 98063000). Used on Type No(s). 1256, 1276, 1278.
15A	691680	Plug–Oil Drain
16	690136	Crankshaft (Used After Code Date 98063000).
		–––––– Note –––––
		693944 Crankshaft (Used After Code Date 95073100 and Before Code Date 98070100).
		693653 Crankshaft (Used Before Code Date 95080100).
		694187 Crankshaft Used on Type No(s). 1275.
20	⋆291675	Seal–Oil (PTO Side)
22	692125	Screw (Engine Sump)
23	693557	Flywheel (Steel Ring Gear) (Includes Steel Pinion Gear)
		–––––– Note –––––
		693556 Flywheel (Steel Ring Gear) Used on Type No(s). 1236, 1122, 1258, 1273, 1277, 1278, 1279.
23B	492326	Flywheel (Plastic Ring Gear)
		–––––– Note –––––
		692682 Flywheel (Plastic Ring Gear) Used on Type No(s). 0120, 0122, 0156, 0210, 0215, 0247, 0622, 1236, 1122, 1273.
24	222698	Key–Flywheel
25	499284	Piston Assembly (Standard)
		–––––– Note –––––
		499288 Piston Assembly (.010” Oversize)
		499292 Piston Assembly (.020” Oversize)
		495979 Piston Assembly (.030” Oversize)
26	495854	Ring Set (Standard)
		–––––– Note –––––
		495852 Ring Set (.010” Oversize)
		495851 Ring Set (.020” Oversize)
		495855 Ring Set (.030” Oversize)
27	691299	Lock–Piston Pin (Used After Code Date 95101500).
		–––––– Note –––––
		691792 Lock–Piston Pin (Used Before Code Date 95101600).
28	498319	Pin–Piston (Standard) (Used After Code Date 95101500).
		–––––– Note –––––
		299691 Pin–Piston (Standard) (Used Before Code Date 95101600).
		498320 Pin–Piston (.005” Oversize) (Used After Code Date 95101500).
		391286 Pin–Piston (.005” Oversize) (Used Before Code Date 95101600).
29	692419	Rod–Connecting (Standard) (Used After Code Date 98063000).
		–––––– Note –––––
		494504 Rod–Connecting (Standard) (Used Before Code Date 98070100).
		499940 Rod–Connecting (.020” Undersize) (Used After Code Date 98063000).
		495490 Rod–Connecting (.020” Undersize) (Used Before Code Date 98070100).

⋆ Included in Engine Gasket Set–Ref. No.358.
● Included in Carburetor Overhaul Kit–Ref. No. 121.
◆ Included in Carburetor Gasket Set–Ref. No. 977.
∅ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

287700

REF. NO.	PART NO.	DESCRIPTION
32	**690356**	Screw (Connecting Rod) (1 7/8” Long) **–––––– Note –––––** **692852** Screw (Connecting Rod) (1 5/8” Long) (Used After Code Date 98063000.) Used on Type No(s). 1256, 1276, 1278.
32A	**690348**	Screw (Connecting Rod) (1 5/8” Long)
33	**495856**	Valve–Exhaust
34	**495857**	Valve–Intake
35	**691279**	Spring–Valve (Intake)
36	**691279**	Spring–Valve (Exhaust)
37	**690456**	Guard–Flywheel
40	**691752**	Retainer–Valve
43	**691668**	Slinger–Governor/Oil
45	**690564**	Tappet–Valve
46	**692421**	Camshaft
46A	**693450**	Camshaft (Used After Code Date 98063000). Used on Type No(s). 1256, 1276, 1278.
46B	**692422**	Camshaft (Used Before Code Date 98070100). Used on Type No(s). 0256, 0656, 1256.
50	**690193**	Manifold–Intake (Used After Code Date 97100500).
50B	**690383**	Manifold–Intake (Used Before Code Date 97100600).
51★●◆692137		Gasket–Intake (Used After Code Date 97100500).
51A●∆★272569		Gasket–Intake (Used Before Code Date 97100600).
51B★●◆692284		Gasket–Intake (Used Before Code Date 97100600).
53	**690227**	Stud (Carburetor) (Used After Code Date 97100500). **–––––– Note –––––** **691098** Stud (Carburetor) (Used Before Code Date 97100600).
54	**691148**	Screw (Intake Manifold) (Used After Code Date 97100500).
54A	**690953**	Screw (Intake Manifold) (Used Before Code Date 97100600).
55	**695130**	Housing–Rewind Starter
55A	**393576**	Housing–Rewind Starter (Includes 63” Rope)
56	**695129**	Pulley–Starter
56A	**295871**	Pulley–Starter
57	**695131**	Spring–Rewind Starter
57A	**490179**	Spring–Rewind Starter
58	**695132**	Rope–Starter
58A	**692188**	Rope–Starter (63” Long)
60	**494212**	Grip–Starter Rope
63	**690547**	Spring–Ratchet
64	**691920**	Adapter–Rachet Spring
65	**695453**	Screw (Rewind Starter)
65A	**690837**	Screw (Rewind Starter)
66	**399671**	Clutch–Starter (Used Before Code Date 99102500).
67	**394897**	Housing–Clutch
68	**691604**	Ball–Clutch
70	**691949**	Ratchet–Clutch
71	**691359**	Cover–Ratchet
73	**691191**	Screen–Rotating
73A	**690492**	Screen–Rotating **–––––– Note –––––** **224517** Screen–Rotating Used on Type No(s). 0026, 0101, 0102, 0112, 0115, 0116, 0117, 0119, 0120, 0121, 0153, 0156, 1236.
74	**691627**	Screw (Rotating Screen) (Hex Head)
74A	**691655**	Screw (Rotating Screen) (Phillips Head)
75	**690582**	Washer (Flywheel)
76	**68238**	Ratchet–Seal (Used Before Code Date 99102500).
78	**690661**	Screw (Flywheel Guard)
81	**691178**	Lock–Muffler Screw
84	**690343**	Plug–Breather

★ Included in Engine Gasket Set–Ref. No.358.
● Included in Carburetor Overhaul Kit–Ref. No. 121.
◆ Included in Carburetor Gasket Set–Ref. No. 977.
∅ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION
93	●**690602**	Bushing–Throttle Shaft
94	**498030**	Kit–Idle Mixture (LMT 154, 155, 156)
		–––––– Note –––––
		498032 Kit–Idle Mixture (LMT 73, 74, 130)
94A	**495932**	Kit–Idle Mixture
94B	**695425**	Kit–Idle Mixture
95	●**691636**	Screw (Throttle Valve)
95A	●**690718**	Screw (Throttle Valve)
98	**495800**	Kit–Idle Speed
98A	**695408**	Kit–Idle Speed
104	●**690525**	Pin–Float Hinge
104A	●**694918**	Pin–Float Hinge
105	●**231855**	Valve–Float Needle
105A	●**694922**	Valve–Float Needle
106	●**690577**	Seat–Inlet (Gravity Feed)
		–––––– Note –––––
		●**691780** Seat–Inlet (Pump Feed)
108A	**692344**	Valve–Choke (Choke A Matic)
108B	**695419**	Valve–Choke (Choke A Matic)
117	●**692408**	Jet–Main (Standard) (LMT 154, 155, 156)
		–––––– Note –––––
		●**232115** Jet–Main (Standard) (LMT 149, 150)
		●**232061** Jet–Main (Standard) (LMT 33, 34, 73, 74, 76, 121, 122, 130, 137,138)
		694352 Jet–Main (Standard) Used on Type No(s). 1275.
117A	●**695415**	Jet–Main (Nikki)
118	**692411**	Jet–Main (High Altitude) (LMT 154, 155, 156)
		–––––– Note –––––
		232116 Jet–Main (High Altitude) (LMT 149, 150)
		231850 Jet–Main (High Altitude) (LMT 33, 34, 73, 74, 76, 121, 122, 130, 137, 138)
118A	●**695416**	Jet–Main (Nikki) (High Altitude)
121	**690191**	Kit–Carburetor Overhaul (Used After Code Date 97100500).
		–––––– Note –––––
		499233 Kit–Carburetor Overhaul (Used After Code Date 96072500 and Before Code Date 97100600).
		498116 Kit–Carburetor Overhaul (Used Before Code Date 96072600).
121A	**695427**	Kit–Carburetor Overhaul
125	**690194**	Carburetor (Gravity Feed) (For Choke A Matic and Manual Choke) (Used After Code Date 97100500).
		–––––– Note –––––
		693194 Carburetor (Pump Feed)) (For Choke A Matic and Manual Choke)
		496796 Carburetor (Pump Feed) (For Choke A Matic and Manual Choke) (Used Before Code Date 95022800). Used on Type No(s). 0121, 0230, 0231, 0246.
		693773 Carburetor Used on Type No(s). 1275.
125A		Carburetor (Nikki) (Service with Walbro Carburetor)
127	●**695005**	Plug–Welch
127A	●**690727**	Plug–Welch
130	**691750**	Valve–Throttle
130A	**695418**	Valve–Throttle
131	**494379**	Kit–Throttle Shaft
131A	**695421**	Kit–Throttle Shaft
133	**494381**	Float–Carburetor
133A	**694914**	Float–Carburetor
137	●◆**281165**	Gasket–Float Bowl
137A	●◆**695426**	Gasket–Float Bowl
141	**495097**	Kit–Choke Shaft (Manual Choke)
141A	**495931**	Kit–Choke Shaft (Choke A Matic)
141B	**695420**	Kit–Choke Shaft
142	●**692412**	Nozzle–Carburetor (LMT 149, 150, 152, 153, 154, 155, 156)
		–––––– Note –––––
		●**231990** Nozzle–Carburetor (LMT 33, 34, 73, 74, 76, 121, 122, 130, 137, 138)
146	**691639**	Key–Timing
147	●**231985**	Jet–Pilot (LMT 73, 74, 121, 122, 130, 137, 138)
		–––––– Note –––––
		●**497472** Jet–Pilot (LMT 33, 34)
167	**692297**	Seal–Air Cleaner Nut
176	⋆**691917**	Seal–O Ring (Air Cleaner Base)
185	**690958**	Nut (Air Cleaner Base)
186	**691609**	Connector–Hose (Vacuum Line)
186A	**692317**	Connector–Hose
187	**296004**	Line–Fuel (Cut to Required Length)
188	**691693**	Screw (Control Bracket)
192	**691989**	Adjuster–Rocker Arm

⋆ Included in Engine Gasket Set–Ref. No.358.
● Included in Carburetor Overhaul Kit–Ref. No. 121.
◆ Included in Carburetor Gasket Set–Ref. No. 977.
∅ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

287700

REF. NO.	PART NO.	DESCRIPTION
202	**691841**	Link–Mechanical Governor
209	**692208**	Spring–Governor
		–––––– Note –––––
		690480 Spring–Governor Used on Type No(s). 0102, 0121, 0235, 0247, 1235, 1250, 1257, 1275.
		691795 Spring–Governor Used on Type No(s). 0117, 0119, 0213, 0228, 0249, 0648, 1228, 1249.
		690576 Spring–Governor Used on Type No(s). 0229, 0231, 1229.
216	**691840**	Choke Link
217	**695409**	Spring–Choke Return
222	**694042**	Bracket–Control (Used After Code Date 99010700).
		–––––– Note –––––
		691644 Bracket–Control (Used Before Code Date 99010800).
222A	**694335**	Bracket–Control Used on Type No(s). 1275.
227	**691374**	Lever–Governor Control
		–––––– Note –––––
		694339 Lever–Governor Control Used on Type No(s). 1275.
231	**●691636**	Screw (Choke Valve)
231A	**●690718**	Screw (Choke Valve)
232	**691842**	Spring–Governor Link
238	**691843**	Cap–Valve
240	**298090**	Filter–Fuel
		–––––– Note –––––
		394358 Filter–Fuel Used on Type No(s). 0112, 0115, 0120, 0121, 0210, 0211, 0215, 0216, 0227, 0233, 0246, 0255, 0256, 0634, 0656, 1036, 1246, 1255, 1256, 1257, 1258, 1273, 1274, 1275, 1277, 1278.
265	**691024**	Clamp–Casing
267	**690804**	Screw (Casing Clamp)
268	**691025**	Casing–Control Wire (Cut to Required Length)
269	**691026**	Wire–Control (Cut to Required Length)
270	**691027**	Nut (Control Wire Casing)
271	**691028**	Lever–Control
276	**●◆692255**	Washer–Sealing
276A	**●◆695410**	Washer–Sealing
287	**691002**	Screw (Dipstick Tube)
300	**495805**	Muffler
		–––––– Note –––––
		495882 Muffler Used on Type No(s). 0225, 0625, 1225.
300A	**496022**	Muffler
304	**690846**	Housing–Blower (Black) (Used After Code Date 93072000).
		–––––– Note –––––
		494269 Housing–Blower (Black) (Used Before Code Date 93071900).
		691400 Housing–Blower (Red) (Used After Code Date 93072000).
		494268 Housing–Blower (Red) (Used Before Code Date 93071900).
		690844 Housing–Blower Used on Type No(s). 0201, 0210, 0211, 0212, 0213, 0215, 0216, 0220, 0224, 0225, 0227, 0232, 0233, 0246, 0255, 0256, 0272, 0625, 0634, 0656, 1036, 1201, 1220, 1224, 1225, 1227, 1230, 1246, 1255, 1256, 1258, 1272, 1276, 1277, 1278.
		690845 Housing–Blower Used on Type No(s). 0228, 0229, 0230, 0231, 0247, 0249, 0648, 1026, 1228, 1229, 1249, 1250, 1261, 1273, 1274, 1275, 1279.
		695065 Housing–Blower (Used After Code Date 99102400). Used on Type No(s). 1235, 1237, 1257, 1281.
		690846 Housing–Blower (Used Before Code Date 99102500). Used on Type No(s). 1235, 1257.
305	**692198**	Screw (Blower Housing)
306	**224696**	Shield–Cylinder
307	**691003**	Screw (Cylinder Shield)

★ Included in Engine Gasket Set–Ref. No.358.
● Included in Carburetor Overhaul Kit–Ref. No. 121.
◆ Included in Carburetor Gasket Set–Ref. No. 977.
∅ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION
309	**693551**	Motor–Starter (3 5/8" Housing Length)(For Steel Ring Gear Only)
		–––––– Note –––––
		693552 Motor–Starter (4 3/8" Housing Length)(For Steel Ring Gear Only)
		497595 Motor–Starter (3 5/8" Housing Length)(For Plastic Ring Gear Only)
		497401 Motor–Starter (4 3/8" Housing Length For Plastic Ring Gear Only)
		693054 Motor–Starter (3 5/8" Housing Length)(For Aluminum Ring Gear Only)
		499521 Motor–Starter (4 3/8" Housing Length)(For Aluminum Ring Gear Only)
309A		Motor–Starter For Replacement Starter Motor, See Ref 309)
310	**690323**	Bolt (Starter Motor) (3 5/8" Housing Length)
310A	**691263**	Bolt (Starter Motor) (4 3/8" Housing Length)
310B	**692329**	Bolt (Starter Motor) (4 9/16" Housing Length)
311	**497608**	Brush Set
311A	**395538**	Brush Set (For 3 5/8" Housing Length)
311B	**490311**	Brush Set (For 4 9/16" Housing Length)
333	**495859**	Armature–Magneto
334	**691061**	Screw (Magneto Armature)
337	**491055**	Sparkplug (Resistor)
344	**693675**	Screw (Cable Clamp)
346	**690661**	Screw (Spark Arrester)
356A	**690807**	Wire–Stop
358	**691580**	Gasket Set–Engine (Used After Code Date 97100500).
		–––––– Note –––––
		495993 Gasket Set–Engine (Used Before Code Date 97100600).
363	**19203**	Flywheel Puller
369	**695422**	Spring–Float Bowl
383	**89838**	Wrench–Sparkplug
385	**692198**	Screw (Fuel Pump)
387	**808656**	Pump–Fuel
404	**691691**	Washer (Governor Crank)
441	**224390**	Bracket–Oil Fill
445	**496894**	Filter–Air Cleaner Cartridge
449	**690664**	Screw (Oil Fill Bracket)
455	**691173**	Cup–Flywheel
455A	**695113**	Cup–Flywheel
456	**695128**	Plate–Pawl Friction
459	**281505**	Pawl–Rachet
462	**691261**	Washer (Starter Cable)
462A	**690288**	Washer (Starter Cable)
467	**691668**	Knob–Air Cleaner
474A	**691063**	Alternator (Dual Circuit)
474B	**691065**	Alternator (Tri Circuit)
493	**694475**	Bracket–Mounting (Used After Code Date 99070500).
493A	**691177**	Bracket–Mounting (Used Before Code Date 99070600).
501A	**691188**	Regulator
503	**691532**	Strap–Starter
505	**691251**	Nut (Governor Control Lever)
510	**693699**	Drive–Starter (Used With Steel Ring Gear)
510B	**495878**	Drive–Starter
510A	**497606**	Drive–Starter (Used With Aluminum & Plastic Ring Gears)
513	**692024**	Clutch–Drive
521	**690581**	Shield–Cable
523	**692014**	Dipstick
524	**★281370**	Seal–Dipstick Tube
525	**691398**	Tube–Dipstick (Screw Mount)
525A	**495768**	Tube–Dipstick (Clamp Mount)
526	**694476**	Screw (Regulator) (Used After Code Date 99070500).
		–––––– Note –––––
		690326 Screw (Regulator) (Used Before Code Date 99070600).
544	**692034**	Armature–Starter (3 5/8" Housing Length)
544A	**390837**	Armature–Starter (For 3 5/8 " Housing Length)
		–––––– Note –––––
		490309 Armature–Starter (For 4 3/8" Housing Length)
552	**491986**	Bushing–Governor Crank
559	**690661**	Screw (Remote Choke Stop)
562	**92613**	Bolt (Governor Control Lever)
579	**691029**	Nut (Starter Cable)
579A	**691626**	Nut (Starter Cable)
592	**690800**	Nut (Rewind Starter)
597	**691696**	Screw

★ Included in Engine Gasket Set–Ref. No.358.
● Included in Carburetor Overhaul Kit–Ref. No. 121.
◆ Included in Carburetor Gasket Set–Ref. No. 977.
∅ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

287700

REF. NO.	PART NO.	DESCRIPTION
601	**95162**	Clamp–Hose
607	**691693**	Screw (Air Cleaner Brace)
607A	**690703**	Screw (Air Cleaner Brace)
608	**695058**	Starter–Rewind (Used After Code Date 99102400). (Used Before Code Date 99102500).
608A	**390391**	Starter–Rewind (Pawl Friction Plate)
613	**691416**	Screw (Exhaust Muffler) (Shoulder Screw)
613A	**691678**	Screw (Exhaust Muffler)
614	**691620**	Pin–Cotter
616	**692012**	Crank–Governor
617	∆★**692138**	Seal–O Ring (Intake Manifold) (Used After Code Date 97100500).
628	**692198**	Screw (Fuel Pump Bracket)
633	**695414**	Seal–Choke/Throttle Shaft
634	●**690801**	Spring/Seal Assembly (Manual Choke)
634A	●**690802**	Spring/Seal Assembly (Choke A Matic)
635	**691909**	Boot–Sparkplug
646	**690460**	Brace–Air Cleaner
654	**690958**	Nut (Carburetor)
655	**691734**	Anchor–Rewind Spring
668	**690510**	Spacer
678	**490817**	Spacer–Rewind
689	**691855**	Spring–Friction
691	★**692407**	Seal–Governor Shaft
692	**690572**	Spring–Detent
695	**693109**	Screw (Ring Gear)
711	**690703**	Screw (Carburetor Shield)
718	**690959**	Pin–Locating
726		Gear–Ring (Steel) (See Ref. 23 for Service)
726A	**399676**	Gear–Ring (Aluminum) (Services Plastic Ring Gear Only)
727	**490324**	Cover–Starter Drive
729	**691335**	Clip–Wire
729A	**691224**	Clip–Wire
732	**691002**	Screw (Starter Drive Cover)
733	**691658**	Screw (Crankshaft Extension)
737	**690372**	Screw (Oil Filter Adapter)
741	**691284**	Gear–Timing
742	**93307**	Retainer–E Ring
750	**691033**	Screw (Oil Pump Cover) (Used After Code Date 98063000).
750A	**690198**	Screw (Oil Pump Cover) (Used Before Code Date 98070100).
757	**691714**	Link–Counterweight
758	**691973**	Counterweight **–––––– Note –––––** **692423** Counterweight (Used After Code Date 98063000). Used on Type No(s). 1256, 1276, 1278.
759	**691239**	Pin–Counterweight
761	**691096**	Screw (Counterweight)
783	**693713**	Gear–Pinion (For Steel Ring Gear Only)
783A	**693059**	Gear–Pinion (For Aluminum Ring Gear Only)
783B	**693058**	Gear–Pinion (For Plastic Ring Gear Only)
788	**690458**	Bracket–Fuel Pump
789	**695050**	Harness–Wiring Used on Type No(s). 1255, 1276, 1277, 1278.
789A	**692037**	Harness–Wiring
797	**693167**	Nut (Brush Retainer)
801	**691429**	Cap–Drive
802	**691286**	Cap–End
803	**693757**	Housing–Starter (3 5/8” Housing Length)(4 3/8” Housing Length Serviced By Ref. 309)
810	**691779**	Extension–Crankshaft
813	**690635**	Clamp
823	**690363**	Screw (Muffler Adapter)
830	**691095**	Stud (Rocker Arm)
842	★**691870**	Seal–O Ring (Dipstick Tube)
847	**496415**	Dipstick/Tube Assembly
847A	**490474**	Dipstick/Tube Assembly
851	**692424**	Terminal–Sparkplug
864	**495864**	Adapter–Muffler
868	∆★**690968**	Seal–Valve
875	**693670**	Base–Air Cleaner
876	**495877**	Kit–Pinion Spring
877	**393456**	Wire/Connector–Alternator (Dual Circuit)
877A	**393537**	Wire/Connector–Alternator (Tri Circuit)
877C	**399916**	Wire/Connector–Alternator (Regulated)
878	**691237**	Harness–Alternator (Dual Circuit)
878A	**691955**	Harness–Alternator (Tri Circuit)
883	∆★**692236**	Gasket–Exhaust
311A	**395538**	Brush Set (For 3 5/8” Housing Length)
896	**691641**	Pin–Drive Retainer
914	**692198**	Screw (Rocker Arm Cover)
918	**393815**	Hose–Vacuum (Cylinder To Impulse Pump) (Cut to Required Length)
926	**498233**	Kit–Housing/Cap (For 4 9/16” Housing Length)

★ Included in Engine Gasket Set–Ref. No.358.
● Included in Carburetor Overhaul Kit–Ref. No. 121.
◆ Included in Carburetor Gasket Set–Ref. No. 977.
∅ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION
934	**691058**	Screw (Fan Retainer)
943	**★690589**	Seal–O Ring (Oil Pump Cover)
943A	**★690604**	Seal–O Ring (Oil Pump Cover) (Used Before Code Date 98070100).
947	**497672**	Solenoid–Fuel **–––––– Note –––––** **694393** Solenoid–Fuel Used on Type No(s). 1275.
947A	**695423**	Solenoid–Fuel
965	**499613**	Cover–Oil Pump (Used After Code Date 98063000).
965A	**496745**	Cover–Oil Pump (Used Before Code Date 98070100).
967	**272403**	Filter–Pre Cleaner
968	**691916**	Cover–Air Cleaner
971	**692129**	Screw (Air Cleaner Base) (Used After Code Date 97100500). **–––––– Note –––––** **690810** Screw (Air Cleaner Base) (Used Before Code Date 97100600).
975	**495933**	Bowl–Float
975A	**695417**	Bowl–Float
977	**690192**	Gasket Set–Carburetor (Used After Code Date 97100500). **–––––– Note –––––** **494385** Gasket Set–Carburetor (Used Before Code Date 97060600).
987	**●691326**	Seal–Throttle Shaft
987A	**692001**	Seal–Throttle Shaft (LMT 33, 34)
987B	**●690998**	Seal–Throttle Shaft
988	**★691317**	Gasket–Oil Adapter
994	**392390**	Arrestor–Spark
996	**690678**	Shield–Carburetor
1003	**490316**	Spring–Brush (For 4 9/16" Housing Length)
1005	**695056**	Fan–Flywheel (Used After Code Date 99102400).
1005A	**691905**	Fan–Flywheel (Used Before Code Date 99102500).
1006	**690452**	Retainer–Fan
1017	**690770**	Screen–Oil Pump (Used After Code Date 98063000).
1017A	**691216**	Screen–Oil Pump (Used Before Code Date 98070100).
1019	**496758**	Kit–Label
1022	**∆★272475**	Gasket–Rocker Cover
1023	**691192**	Cover–Rocker Arm
1024	**499054**	Pump–Oil (Used After Code Date 98063000).
1024A	**493884**	Pump–Oil (Used Before Code Date 98070100).
1026	**692003**	Rod–Push (Intake) **–––––– Note –––––** **692011** Rod–Push (Exhaust)
1027	**492932**	Filter–Oil
1028	**496744**	Adapter–Oil Filter
1029	**691751**	Arm–Rocker
1034	**690822**	Guide–Push Rod
1035	**693784**	Shaft–Pump
1036	**695700**	Label–Emission (Used After Code Date 00063000). **–––––– Note –––––** **694997** Label–Emission (Used Before Code Date 00070100 and After Code Date 99093000). **694318** Label–Emission (Used Before Code Date 99100100 and After Code Date 98123100). Used on Type No(s). 1005, 1026, 1036, 1224, 1228, 1229, 1235, 1236, 1249, 1255, 1256, 1257, 1258, 1272, 1273, 1274, 1275, 1276, 1277, 1279.
		499364 Label–Emission (Used Before Code Date 99010100 and After Code Date 97052500). Used on Type No(s). 1026, 1122, 1201, 1220, 1224, 1225, 1227, 1228, 1229, 1235, 1236, 1246, 1249, 1255, 1256, 1272, 1273, 1274.
		499363 Label–Emission (Used Before Code Date 97052600). Used on Type No(s). 0622, 0625, 0634, 0644, 0648, 0656.
1044	**691958**	Screw (Rewind Starter)
1054	**280275**	Tie–Cable
1055	**690528**	Tube–Oil Pump (Used Before Code Date 98070100).
1058	**274789**	Owner's Manual (Emission Engines) **–––––– Note –––––** **272623** Owner's Manual (Non Emission Engines)
1091	**691333**	Cap–Limiter
1095	**691581**	Gasket Set–Valve (Used After Code Date 97100500). **–––––– Note –––––** **495992** Gasket Set–Valve (Used Before Code Date 97100600).
1119	**691183**	Screw (Alternator)
1127	**695407**	Screw (Float Bowl)

★ Included in Engine Gasket Set–Ref. No.358.
● Included in Carburetor Overhaul Kit–Ref. No. 121.
◆ Included in Carburetor Gasket Set–Ref. No. 977.
∅ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.